

Caution:
Disconnect the Negative Battery Cable Prior to Installation

Instrument	Harness Connections			
	Green	Black	Red/White	White/Black
Coolant & Oil Temperature	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Fuel	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Oil Pressure	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Sender Input
Voltmeter	Switched ignition +ve supply (via 3A fuse)	Chassis or battery negative	Instrument Illumination 12volt supply (side light feed)	Not Used

